



STONESKIRT *The Ultimate Skirting!*


ACCESS DOOR ASSEMBLY INSTRUCTIONS

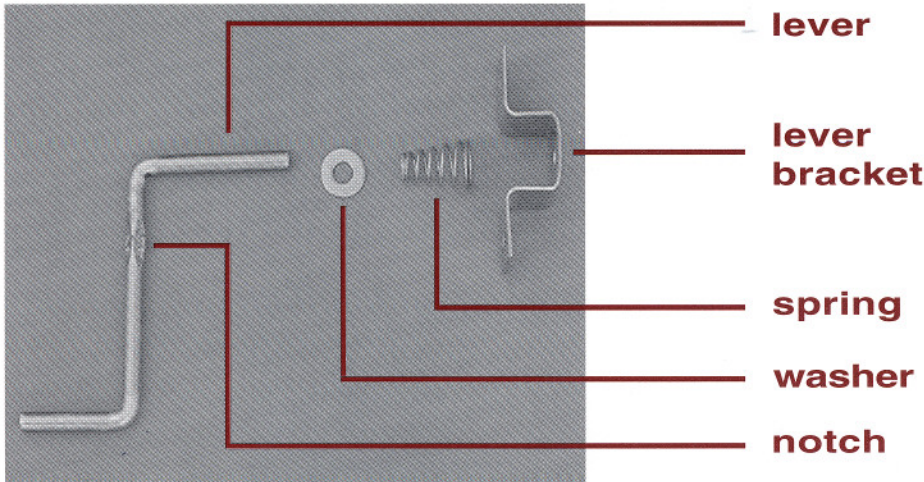



The four components of the door latch that will need to be assembled are: lever, washer, spring and lever bracket. The lever is notched on the middle section to act as a stop for the other components.

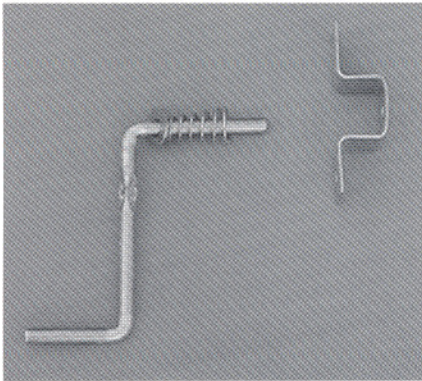



First slide the washer on the end closest to the notch. The spring goes on the lever next, make sure that the narrow end will be next to the washer.

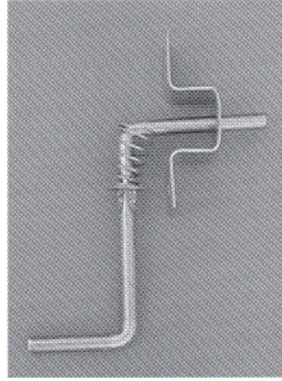

The last step is to slide the lever bracket on to the lever so that it partially encloses the spring as shown in the picture.

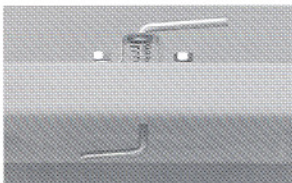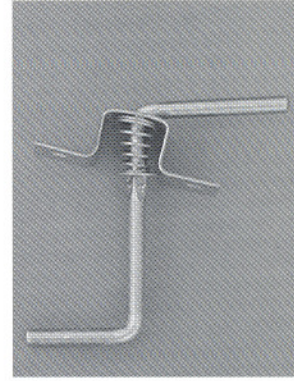

To install the latch assembly on to the door, start from the backside and push the latch assembly through until the latch bracket is flush with the door panel. Place the flat washer on the bolts and insert through the door and the lever bracket from the front. Secure the bolts with a lock washer and nut.

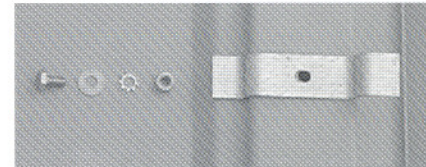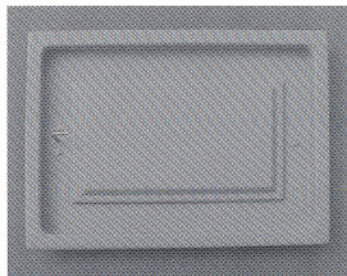

To attach the mounting bracket to the access door first slide the flat washer on to the bolt and insert through the front of the door. Place bracket on the back side of the panel, as shown above, and secure with the lock washer and nut. The door panel is now ready to install with the StoneSkirt system.